 


# SCHNEIDER

## REFRIGERATOR

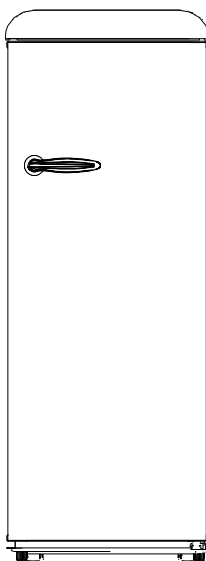

SCCL222VB / SCCL222VR  
SCCL222VVA /  
SCCL222VCR

### Instructions for use

Please read the following instructions carefully before using this device. Please keep these instructions for future reference.



**This appliance is intended for household use only!**  
Please read all instructions carefully before first use and save them for future reference.

#### IMPORTANT SAFETY INSTRUCTIONS

**Please read the following operating instructions carefully before connecting your new device, they contain important information on safety, how to use, install and keep your device in working order. Please keep these instructions for future reference.**

1. This device is intended for use in household applications.
2. This device can be used by children from 8 years old and by people with physical abilities, sensory where reduced mental where a lack of experience and of knowledge to provided they have been placed under surveillance or that they have received instructions concerning the use of device safely and that they understand the dangers incurred. The children born must not to play with the device. The cleaning and maintenance by the user must not be carried out by children without supervision.

3. Before plugging in the appliance, make sure that the voltage of the mains socket in your home matches that shown on the rating plate.
4. Do not damage the cooling circuit. This warning is only valid for devices whose cooling circuit is accessible by the user.
5. Make sure the appliance is unplugged before cleaning.
6. For to clean this device, use a damp cloth or glass cleaner. Never use detergent or solvent.
7. When defrost has been carried out, or when the refrigerator ceases to be used, clean the appliance to prevent the spread of odor. Too much gel can affect refrigeration.
8. He is recommended to use this device without electric extension.
9. Do not place any hot food or drink in the appliance.
10. In order to save electricity consumption, keep air circulation around the appliance and discard food wrappers before putting them in the refrigerator as soon as possible.

11. Do not store toxic materials such as ether, methanol, gasoline, etc., which are volatile and can burn or explode in them.
12. Do not place flammable materials in the refrigerator unless they have been authorized by the manufacturer.
13. Close the door after use to avoid temperature loss.
14. Do not place the device near a heat source or in direct sunlight.
15. This product should not be used outdoors and should not be exposed to rain.
16. The device must be placed on a flat and stable surface.
17. The appliance must be placed so that the socket is easily accessible.
18. Do not place heavy objects on the refrigerator and do not wet it.
19. To avoid the risk of electric shock, never use this appliance with wet hands or bare feet on a wet surface.
20. Do not use the device outdoors or in a humid place.
21. Do not move the device when it is full to avoid tipping.

22. The power cable must be plugged into a grounded outlet.
23. Never lift the device by the power cable.
24. Keep the power cable away from heated surfaces.
25. Do not attempt to repair, adjust, or replace any part of this appliance yourself. In the event of a malfunction, contact the after-sales service.
26. Children should be supervised to ensure that they do not play with the appliance.
27. If the power cable is damaged, it must be replaced by the manufacturer, its after-sales service or persons with similar qualifications in order to avoid any danger.
28. He is recommended regularly examine the cable power supply for detect all sign of deterioration possible, and the device born must not be used if the cable is damaged.
29. The device is equipped with a grounding plug to protect you from any electrical risks and must be plugged into a socket outlet with an earth contact.
30. The devices born are not destined to be put in functioning to way external timer or by a separate remote-control system.

31. **CAUTION:** Keep the ventilation openings in the enclosure of the appliance, in its exterior part or in its built-in structure free.

32. **CAUTION:** Do not use mechanical devices or other means to speed up the defrosting process, other than those recommended by the manufacturer.

33. **CAUTION:** Do not use electrical appliances inside the food storage compartment, unless they are of the type recommended by the manufacturer.

34. **CAUTION:** Do not damage the refrigerator electrical circuit.

35. **WARNING:** When positioning the device, make sure that the power cord is not pinched or damaged.

36. **WARNING:** Do not place of plinths mobile or taken multiple or of portable power supplies on the back of the device.

37. Children aged 3 to 8 are allowed to load and unload refrigeration devices.

38. For to avoid the contamination from food, please observe the following instructions:

- Prolonged opening of the door can lead to a significant increase in temperature in the compartments of the appliance.
- Regularly clean surfaces that may enter in contact with from food and from systems of accessible drainage.

- Store raw meat and fish in suitable containers in the refrigerator, so that they do not come into contact with and drip onto other foods.
- The compartments of them and oiles for products frozen foods are suitable for preserving frozen food, for storing or making ice cream and for making ice cubes.
- The one-, two- and three-star compartments are not suitable for freezing fresh food.
- If the refrigeration appliance is left empty for long periods of time, turn it off, defrost, clean, dry and leave the door open to prevent mold growth in the appliance.

39. Place the device against a wall whose free distance does not exceed 75 mm and exceeds 50 mm.

40. This refrigeration appliance is not intended for use as a built-in appliance.

41. Recommended storage time for frozen food in the freezer. These times vary depending on the type of food. This refrigeration appliance is not suitable for freezing foodstuffs.

Foods that you freeze can be stored for 1 to 12 months (minimum at  $-18^{\circ}\text{C}$ ).

Food	Storage time
Bacon, casseroles, milk	1 month
Bread, ice cream, sausages, pies, prepared shellfish, oily fish	2 months
Non-oily fish, shellfish, pizza, scones and muffins	3 months
Ham, cakes, biscuits, beef and lamb chops, poultry pieces	4 months
Butter, vegetables (blanched), eggs whole and yolks, cooked crayfish, minced meat (raw), pork (raw)	6 months
Fruit (dry or in syrup), egg whites, beef (raw), whole chicken, lamb (raw), fruit cakes	12 months

42. When freezing fresh food with an “best before / best before / best date” date, you must freeze it before that date has expired.

43. Check that the food has not already been frozen. In effect, the food frozen which have thawed completely should not be refrozen.

A times thawed; the food should be eaten quickly.

- To avoid spoilage of food due to transfer of germs: Store unpackaged animal and plant products separately in drawers. This also applies to different kinds of meat.



- If food needs to be kept together for lack of space: wrap it.
- Never store fruits and vegetables on a balcony with meat or fish.

Food	Storage period
Butter	90 days
Hard cheese	110 days
Milk	7 days
Sausage, cold meats	9 days
Meat	7 days



Suitable for food

Only an authorized technician can change the LED in the event of a fault.

## Refrigerant



 
Danger; risk of fire / flammable materials

**Danger; fire hazard/  
flammable materials**

**WARNING:** When positioning the device, make sure that the power cord is not pinched or damaged.

**WARNING:** Do not place mobile multi-outlet cradles or portable power supplies on the back of the device. The refrigerant gas contained in the circuit of this device is isobutane (R 600a), a low-polluting but flammable gas. When transporting and installing the appliance, take care not to damage any part of the refrigeration circuit.

## DESCRIPTION OF THE APPLIANCE

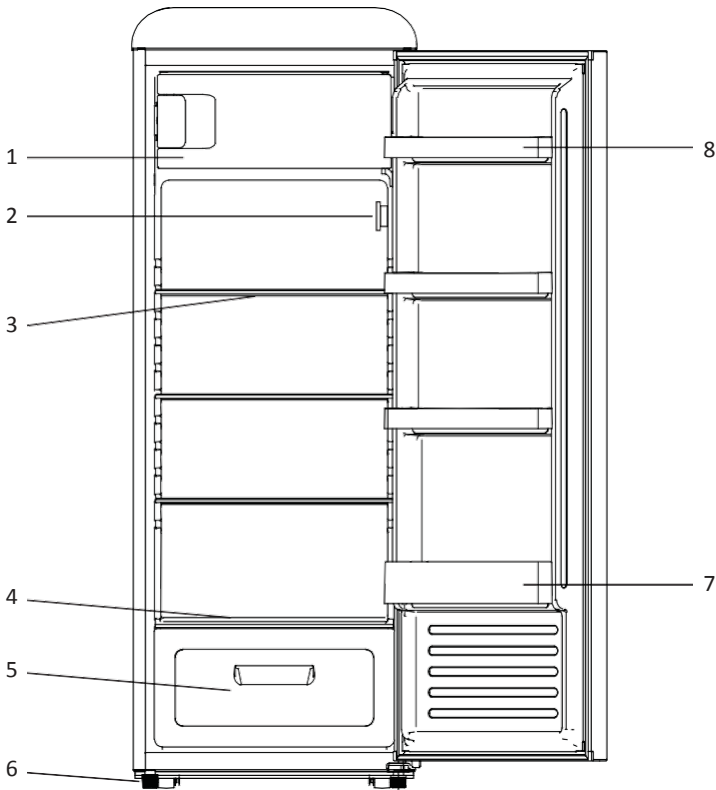

- 1. Freezer
- 2. Refrigerator thermostat
- 3. Refrigerator shelf
- 4. Vegetable drawer cover

- 5. Vegetable and Fruit Bin
- 6. Adjustable feet
- 7. Bottle compartment
- 8. Egg compartment



## WARNINGS



Danger of death or serious injury.



Prohibited!



Risk of accidental injury or damage to the device



Danger; risk of fire / flammable materials



The voltage applied to the device must match the data on the rating plate.  
Use a standard three-pole socket (> 10A) and an earthed plug.



Keep the plug clean, make sure it is plugged in properly. Do not crush the plug, damage the power cord or leave it near the compressor (risk of deterioration of the cable insulation).



Do not store flammable, highly volatile and oxidized products in the refrigerator.








If the refrigerator produces abnormal noise, odor, smoke or any unusual phenomenon, disconnect it from the mains and contact customer service.



Disconnect the power cord before replacing the bulb, clean the refrigerator if it is to be left out of service for an extended period.



 
It is forbidden to hang heavy objects on the door or to carry out any action that could overturn the refrigerator (supervise children).

 <p>Do not place heavy objects or devices that produce heat (thermos, amplifier, candle, etc.) on the refrigerator.</p>	 <p>Do not use the refrigerator outdoors or in the rain.</p>
 <p>Do not keep any glass bottles or canned liquid in the freezer compartment (risk of bursting). Warning: do not touch the products stored in the freezer with wet hands (risk of injury).</p>	 <p>Do not touch the refrigerator when it loses gas, first close the safety valve and then open the window to ventilate the premises. Do not unplug the power cord or turn the thermostat on first (risk of fire).</p>
 <p>Do not intervene on the circuit if you are not a qualified professional.</p>	

## INSTALLATION


### 1. Move the refrigerator correctly:

- Grasp it by the bottom, do not pull it by the door or by the handle.
- Keep it horizontal during transport. Don't tip it upside down. Do not tilt it more than 45 °.
- Avoid any collision or violent shock.

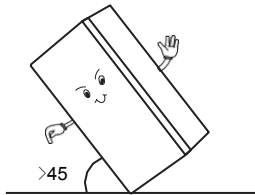


### 2. Install the refrigerator correctly:

 - Install the refrigerator in a dry and ventilated place. Never place it near a heat source or expose it to direct sunlight.
- Install the refrigerator horizontally on a hard, load-resistant base / floor. Use the adjustable feet to level it.
- For your safety, this refrigerator must be connected to a grounded outlet. Do not ground it through the telephone line or gas pipe.
- After delivery, wait 12 to 24 hours before connecting the appliance so that the refrigeration circuit is stabilized.

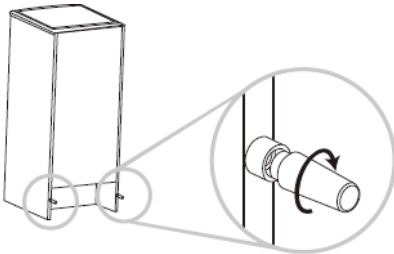

 Place the device against a wall with a free distance not exceeding 50-75mm

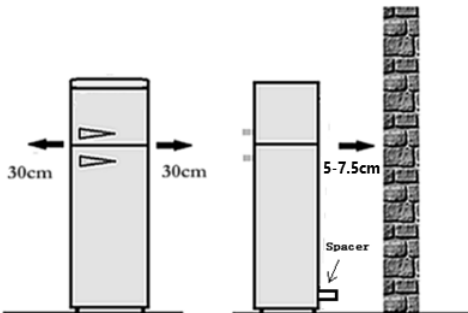

## POSITIONING

Install this appliance in a place where the ambient temperature corresponds to the climatic class indicated on the nameplate of the appliance:

Class climatic	Temperature ambient
<b>SN</b>	+ 10 °C to +32 °C
<b>N</b>	+ 16 °C to +32 °C
<b>ST</b>	+ 16 °C to +38 °C
<b>T</b>	+ 16 °C to +43 °C

### For refrigeration devices with a climatic class:

- extended temperate (SN): this refrigeration appliance is intended for use at ambient temperatures between 10 ° C and 32 ° C;
- temperate (N): this refrigeration appliance is intended for use at ambient temperatures between 16 ° C and 32 ° C;
- subtropical (ST): this refrigeration appliance is intended for use at ambient temperatures between 16 ° C and 38 ° C;
- tropical (T): this refrigeration appliance is intended for use at ambient temperatures between 16 ° C and 43 ° C;

### Meaning of the labeling \* of freezers:

- ❶ 1- (\*), 2- (\*\*), and 3-stars (\*\*\*) freezers are **not suitable for freezing fresh food**.
- ❷ 2-stars (\*\*) and 3-stars (\*\*\*) freezers are suitable for storing frozen food (**pre-frozen**) and ice or for making ice and ice cubes.

COMPARTMENTS	STARS (*)	TARGET STORAGE TEMPERATURE	SUITABLE FOOD
FREEZER	(***)*	≤ -18 °C	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>3 months</b></li> <li>❶ <b>Suitable</b> for freezing <b>fresh</b> food.</li> </ul>
FREEZER	***	≤ -18 °C	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>3 months</b></li> <li>❶ <b>Not suitable</b> for freezing <b>fresh</b> food.</li> </ul>

FREEZER	**	≤ -12 °C	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>2 months</b></li> </ul> <p>ⓘ <b>Not suitable</b> for freezing <b>fresh</b> food.</p>
FREEZER	*	≤ -6 °C	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>1 month</b></li> </ul> <p>ⓘ <b>Not suitable</b> for freezing <b>fresh</b> food.</p>
0* - COMPARTMENT	-	-6 °C - 0 °C	<ul style="list-style-type: none"> <li>➤ Suitable for fresh meat products (pork, beef, chicken, etc.) and processed food consumed or processed within the same day or within the next three days after storage (max.).</li> </ul> <p>ⓘ <b>Not suitable</b> for freezing food or for storing frozen food.</p>

## SITE

The device must be installed sufficiently away from heat sources such as radiators, boilers, direct sunlight, etc.



### **WARNING !**

It must be possible to disconnect the device of the mains supply; the plug must therefore be easily accessible after installation.

### **Electrical connection**

Before making the connection, make sure that the voltage and frequency indicated on the nameplate correspond to your household power supply.

The device must be connected to the earth. The plug of the power supply cable has a contact for this purpose. If the household power outlet is not earthed, connect the appliance to a separate earth in accordance with the regulations in force, consulting a qualified electrician.

The manufacturer declines all responsibility if the above safety instructions are not observed. This device complies to EEC directives.

## USE

Before first use, clean all parts of the refrigerator with a soft cloth dampened in lukewarm water and a mild detergent. Rinse them thoroughly with clean water and dry them with a dry cloth. Adjust the thermostat knob, then turn on the device. The appliance turns on and the interior light of the refrigerator comes on.

- Do not place vegetables containing water in direct contact with the refrigerator compartment (water accelerates their deterioration).
- Before placing hot food in the refrigerator, be sure to let it cool down to room temperature first.
- Be sure to maintain sufficient space for ventilation.
- The individual food packaging makes it easier to use the refrigerator. Be careful not to open the door too often to save energy.

### Temperature setting

To adjust the interior temperature of the refrigerator, turn the thermostat control knob. The thermostat will maintain the temperature within a range determined according to the position selected. The thermostat mark indicates its position, not its temperature. Set the thermostat to "1" and "4" in summer and between "4" and "7" in winter. Positions "3" and "4" are the more economical.

Refrigerator compartment: Different foods, especially vegetables and fruits, have different storage temperatures. Storage time is 1-3 days. Freezer compartment: 1 ~ 2: 1 week, 3-7: 1 month.

## COLDEST ZONE IN THE REFRIGERATOR

- You will obtain better preservation of your food if you place it in the cold zone which best suits its nature.
- The symbol below indicates the location of the coldest area of your refrigerator.
- This zone is delimited at the top by the low temperature compartment and at the bottom by the symbol or by the shelf positioned at the same height.
- In order to guarantee the temperatures in the coldest zone, take care not to modify the positioning of this shelf.



### TEMPERATURE INDICATOR INSTALLATION

- To help you adjust your refrigerator properly, it is equipped with a temperature indicator (delivered in the package insert) which will allow you to control the average temperature in the coldest area.
- To install the temperature indicator, please observe the indications according to the diagrams below.



 
**Warning:**

**This indicator is preseen for function uniquely withyour refrigerator, watch to do not use it in another refrigerator (in fact, thecoldest zone is not the same), or for another use.**

**CHECKING THE TEMPERATURE IN THE COLDEST ZONE**

Once the temperature indicator has been installed, you can regularly check that the temperature of the coldest area is correct, and, if necessary, adjust the thermostat accordingly as indicated above.

For the good conservation of food in your refrigerator and in particular in the coldest zone, make sure that in the temperature indicator appears "OK". If "OK" does not appear, the average temperature of the zone is too high. Set the thermostat to a higher position.

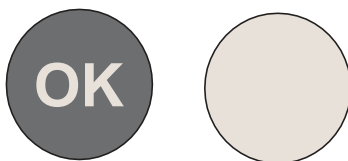

Whenever the thermostat is changed, wait for the temperature inside the appliance to stabilize before proceeding with a new adjustment, if necessary. Only change the thermostat position gradually and wait at least 12 hours before re-checking and making any changes.

**REMARKS :**

After loading the appliance with fresh food or after repeated opening (or prolonged opening) of the door, it is normal that the inscription "OK" does not appear in the temperature indicator. Wait at least 12 hours before readjusting the thermostat.

**DEFROST**

- After a certain period of operation, the refrigerator will build up a layer of frost which, if too thick, will reduce its performance. Remove the frost by hand as soon as it reaches a thickness of 5mm.
- Take all food out of the refrigerator, wrap it and put it in a cool place. Remove all the accessories and set the thermostat to "0" (or unplug the power cord), open the freezer compartment door (place a container of water at around 50 ° C there to speed up defrosting).
- Do not use hard or aggressive cleaning objects which could damage the surface. Also do not use electric heaters for defrosting.

## FOOD PLACEMENT

Remove wrappers before placing food in the refrigerator (for example, wrappers from yoghurt packs).

The observation of the following advice is likely to avoid cross-contamination and to prevent poor storage of food.

- Systematically package products to prevent food from contaminating each other.
- Wash hands before touching food and several times during meal preparation, especially if it involves handling different products.
- Do not reuse utensils that have already been used without having cleaned them first, such as the cutting board.
- Wait for the food to cool completely before placing it in the refrigerator.
- Limit the number of times the door is opened and, above all, do not leave it open for too long in order to avoid a rise in the internal temperature.
- Place foods in the refrigerator so that air can circulate between them.

### STORING FOODS IN THE REFRIGERATOR ACCORDING TO THEIR NATURE

In a refrigerator, the temperature is not uniform (with the exception of ventilated or stirred cold appliances). Each type of food has an ideal storage temperature and therefore a precise location to be observed.

It is important to place foods in the refrigerator according to their type:

SITE	PRODUCTS
<b>Cool zone</b> On the upper shelf	Dairy products, dairy desserts, fats, fresh cheeses.
<b>Cold zone</b> On the vegetable drawer	Meats, poultry, poisons, cold cuts, prepared meals, mixed salads, egg or cream-based preparations and pastries, fresh pasta, pie crust, pizzas / quiches, fresh products and raw milk cheeses, ready-to-eat vegetables use and more generally, any fresh product with a use-by date.
In the vegetable drawer	Fresh fruits and vegetables.

## CLEANING AND MAINTENANCE

Warning: Always turn off and unplug the unit before cleaning or performing any maintenance.

### Cleaning the refrigerator

- Interior accessories

Remove all interior accessories. Wash them in lukewarm water with a mild detergent (dish soap for example), rinse with bleach and dry thoroughly. Wipe the inside and outside of the refrigerator with a soft cloth.

 
- Door joint  
Use neutral detergent.

### WARNING

- Clean the refrigerator every two months to keep the interior and exterior clean.
- Before cleaning, disconnect the refrigerator from the mains. Clean it with a neutral detergent and then wipe it dry. Thoroughly clean the door seal, especially if it is dirty. The useful life of the refrigerator will only be increased.
- To be prohibited for cleaning: hot water, degreaser, acid or basic detergent, scented soap, gasoline, alcohol, organic solvents and brush.
- To prevent corrosion, do not clean the refrigerator with water alone.
- Check the condition of the mains plug and cord.
- If the refrigerator will not be used for an extended period of time, disconnect it from the mains, remove the food and clean it. Leave the door ajar and store the refrigerator in a dry and ventilated place.

### Tips for saving energy

1. Allow food to cool before placing it in the appliance.
2. Make sure that the food does not touch the back of the compartment (s).
3. Make sure the device has enough space around it. This will help reduce energy consumption and lower your electricity bills.
4. Do not block the vents or grilles, for maximum energy efficiency.
5. For an efficient use of energy, respect the original position of all internal accessories (baskets, drawers, shelves).
6. Do not open the doors frequently.
7. Don't leave the doors open for too long.
8. Do not set the thermostat too cold.
9. Place frozen products in the refrigerator to thaw them.
10. Defrost the freezer when a thick layer of ice has accumulated.

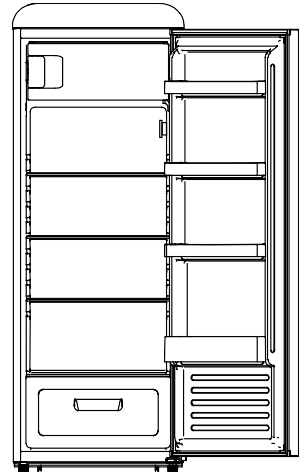

## TROUBLESHOOTING GUIDE

Problem	Solution
Malfunction	<ul style="list-style-type: none"> <li>• Check if the power cord is properly connected.</li> <li>• Make sure the thermostat is in the operating position.</li> </ul>
The refrigeration system is not working well	<ul style="list-style-type: none"> <li>• Set the thermostat to a lower value.</li> <li>• The refrigerator has been filled with hot food.</li> <li>• Frequent opening of the door.</li> <li>• The refrigerator is exposed to the sun or is located near a heat source.</li> <li>• Inadequate ventilation.</li> <li>• Door not properly closed (the door has collapsed; the seal may be worn or damaged).</li> </ul>
Freezing food in the refrigerator	<ul style="list-style-type: none"> <li>• Set the thermostat to a lower value.</li> <li>• Keep vegetables with a high-water content away from the back wall of the refrigerator.</li> </ul>
Excessive noise	<ul style="list-style-type: none"> <li>• Place the refrigerator level and on a load-resistant base / floor.</li> <li>• Make sure all accessories are in the correct position.</li> <li>• The compressor drain pan has fallen out.</li> <li>• The compressor refrigerant pipes are touching.</li> </ul>
Unpleasant odor	<ul style="list-style-type: none"> <li>• Make sure food is tightly packaged.</li> <li>• Food preservation problem.</li> <li>• Clean the inside of the refrigerator.</li> </ul>
Poor operation in winter	<ul style="list-style-type: none"> <li>• The ambient temperature is too low.</li> <li>• Set the economy switch to "ON".</li> </ul>
The compressor does not stop working in summer	<ul style="list-style-type: none"> <li>• The refrigerator has been filled with hot food.</li> <li>• Set the thermostat to a higher value.</li> <li>• Frequent opening of the door.</li> <li>• Inadequate ventilation.</li> <li>• Door not properly closed (the door has collapsed; the seal may be worn or damaged).</li> </ul>
Water leaks	<ul style="list-style-type: none"> <li>• Make sure the drip tray is in the correct position on the compressor.</li> </ul>

## NORMAL PHENOMENA

- Please check the phenomena described below before calling after-sales service:

<b>Problem</b>	<b>Cause</b>
We hear a sound of liquid	This noise is normal. It is related to the circulation of the refrigerant during the operation or the rest of the compressor.
Metallic noise	Noise of injection molded insulation when expanding or shrinking.
Compressor noise when starting or stopping	This noise is normal during compressor operation, especially when starting and stopping.
Moisture outside or around window	Slight traces of condensation may appear on the refrigerator on a very humid day (phenomenon similar to drops condensing on the surface of ice water).

## **ENERGY LABELING REGULATION DATA SHEET: 2019/2016 / EU**

The product information sheet according to EU regulation n ° 2019/2016

The energy labeling of refrigerating appliances can be found under the URL or QR code indicated on the energy label, SCCL222VB - URL: <https://eprel.ec.europa.eu/qr/385530>

SCCL222VR - URL: <https://eprel.ec.europa.eu/qr/385531>

SCCL222VVA - URL: <https://eprel.ec.europa.eu/qr/385533>

SCCL222VCR - URL: <https://eprel.ec.europa.eu/qr/388836>

### **Relationship between energy label 1060/2010 / EU and the new energy label 2019/2016 / EU**

The current 1060/2010 / EU label uses the less efficient A + ++ / D labeling system. The mixed scale of the label with many "+" is no longer transparent and the majority of products are already in the first 2 to 3 classes today.

Therefore, the European Union has revised and optimized the label according to the needs of users. The new 2019/2016 / EU energy label will only contain energy classes A to G. The class levels will be regularly updated.

## **GUARANTEE**

The warranty does not cover wearing parts of the product, nor problems or damage resulting from:

- (1) surface deterioration due to normal wear and tear of the product;
- (2) defects or deterioration due to contact of the product with food or liquids and due to corrosion caused by rust or the presence of insects;
- (3) any unauthorized incident, abuse, misuse, modification, disassembly or repair;
- (4) any improper maintenance operation, use not in accordance with the instructions concerning the product or connection to an incorrect voltage;
- (5) any use of accessories not supplied or approved by the manufacturer.

The warranty will be void if the nameplate and / or serial number of the product is removed.

## Product warranty and spare parts available

Under the terms of the applicable manufacturer's warranty, the use of Customer Service is free. The minimum warranty period (manufacturer's warranty for private consumers) in the European Economic Area is 2 years according to the warranty terms applicable to the place. The warranty conditions do not affect any other rights or claims held by you under local law.

Detailed information on the warranty period and warranty conditions in your country are available from customer service, your dealer, or our website.

Original spare parts that function according to the relevant Eco-design Directive can be obtained from customer service for a period of at least 4 years from the date your device is placed on the market in the European Economic Area.


For more technical specifications on the repair agent and to orderspare parts, please go to: [https:// www.schneiderconsumer.com](https://www.schneiderconsumer.com)

### DISPOSAL



The European Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE) requires that used household appliances not be thrown into the normal stream of municipal waste.

Used devices must be collected separately in order to optimize the recovery rate and recycling of the materials they are made of and reduce the impact on human health and the environment. The crossed-out wheeled bin symbol is affixed to all products to remind you of the obligations of separate collection. Consumers should contact the local authorities or their dealer regarding the procedure to follow for the removal of their device.

Information on the meaning of the conformity mark  The CE marking indicates that the product meets the main requirements of European Directives 2014/35 / EU (Low Voltage), 2014/30 / EU (Electromagnetic Compatibility), 2011/65 / EU (Reduction of the use of certain hazardous substances in EEE).

Imported by SCHNEIDER CONSUMER GROUP  
12, rue Jules Ferry, 93110 Rosny-sous-Bois, FRANCE

# SCHNEIDER