 


# SCHNEIDER

## REFRIGERATOR

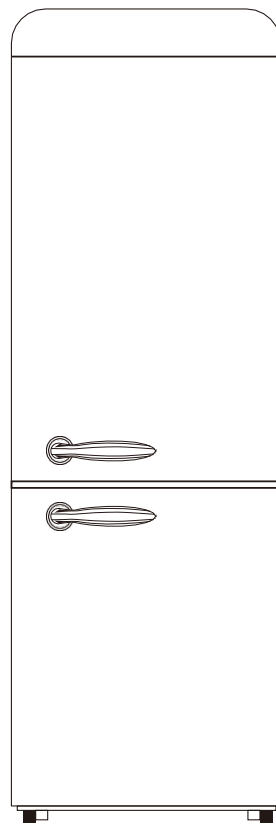

**CE** SCB300VR, SCB300VB, SCB300VVA,  
SCB300VBL, SCB300VWR, SCB300VCR

### Notice of use

Please read the following instructions carefully before using this device. Please keep these instructions for future reference.

## **SAFETY INSTRUCTION**

Read all instructions before using the appliance.

Read this manual carefully before using the machine so that you know exactly what to do and what not to do.

Improper use of the appliance can be dangerous, especially for children.

This device is intended for use in household applications.

This device may be used by children of at least 8 years of age and by persons with reduced physical, sensory or mental capacities or without experience or knowledge, if (if they) are properly supervised. s or if they have been given instructions relating to the safe use of the appliance and the risks involved have been understood. Children must not play with the device. Cleaning and user maintenance shall not be made by children without supervision.

Children should be supervised to ensure that they do not play with the appliance.

**CAUTION** : Keep the ventilation openings in the enclosure of the appliance or in the built-in structure clear.

**CAUTION** : Do not use mechanical devices or other means to accelerate the defrosting process other than those recommended by the manufacturer.

**CAUTION** : Do not damage the refrigeration circuit.

**CAUTION** : Do not use electrical appliances inside the food storage compartment, unless they are of the type recommended by the manufacturer.

If the power cable is damaged, it must be replaced by the manufacturer, its after-sales service or similarly qualified persons in order to avoid any danger.

Do not store explosive substances such as aerosols containing flammable propellants in this device.

- Before you throw away your appliance: remove the door and leave the shelves in place so that children cannot easily play inside.

- Never allow children to operate or play with the appliance.
- Never clean any parts of the appliance with flammable fluids. The fumes represent a fire hazard or can cause explosions.
- Do not store or use gasoline or other flammable gases or liquids in or near this appliance. Fumes can cause fire or explosion.
- Do not install this device in a place with extreme climatic conditions such as: insufficient ventilation, temperatures below 16 ° C or above 43 ° C

This product complies with current European safety standards for electrical devices. It has been subjected to long trials and meticulous tests to assess its safety and reliability.

Before connecting the appliance, check that the data on the rating plate correspond to those for your installation.

The packaging materials are recyclable, do not leave them in the environment, take them to a specialized center for recycling.

The electrical safety of this device is guaranteed only when it is connected to an electrical installation equipped with a grounded plug-in good condition, in accordance with the standards in force. If in doubt, have the installation checked carefully by a qualified technician.

The use of this device, like that of any electrical device, involves observing certain fundamental rules:

- Do not touch the device with wet or damp hands or feet;
- Do not pull on the power cable to disconnect the plug from the outlet;
- Do not leave the device exposed to atmospheric agents;
- Do not allow the appliance to be used by children without supervision;
- Do not unplug or insert the plug into the socket with wet hands; before carrying out any cleaning or maintenance operation, disconnect the appliance from the power supply by unplugging the plug or by turning off the main switch of the installation; The socket must remain accessible after installation of the device.

- In the event of a breakdown or malfunction, switch off the device and do not damage it. The power outlet must always remain accessible after installation of the device.

**WARNING** : When positioning the device, make sure that the power cord is not pinched or damaged.

**WARNING** : Do not place multiple socket outlets or portable power supplies on the back of the device. Children aged 3 to 8 are allowed to load and unload refrigeration devices.

To avoid contamination of food, please observe the following instructions:

- Prolonged opening of the door can lead to a significant increase in temperature in the compartments of the appliance.
- Regularly clean surfaces that may come into contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that they do not come into contact with and drip onto other foods.

- The two-star compartments for frozen products are suitable for storing frozen food, storing or making ice cream and for making ice cubes.
- The one-, two- and three-star compartments are not suitable for freezing fresh food.
- If the refrigeration appliance is left empty for long periods of time, turn it off, defrost, clean, dry and leave the door open to prevent mold growth in the appliance.

Place the device against a wall whose free distance does not exceed 75 mm and exceeds 50 mm.

The LED lamp is not replaceable. Only an authorized technician can change the LED in the event of a fault.

For instructions for installing the appliance, refer to the “Installation” paragraph below in the manual. For the maintenance and cleaning of the appliance, refer to the paragraph 'Maintenance and cleaning'.

This refrigeration appliance is not intended for use as a built-in appliance.

Recommended storage time for frozen food in the freezer. These times vary depending on the type of food. Foods that you freeze can be stored for 1 to 12 months (minimum at -18 ° C).

Food	Storage time
Bacon, casseroles, milk	1 month
Bread, ice cream, sausages, pies, prepared shellfish, oily fish	2 months
Non-oily fish, shellfish, pizza, scones and muffins	3 months
Ham, cakes, biscuits, beef and lamb chops, poultry pieces	4 months
Butter, vegetables (blanched), eggs whole and yolks, cooked crayfish, minced meat (raw), pork (raw)	6 months
Fruit (dry or in syrup), egg whites, beef (raw), whole chicken, lamb (raw), fruit cakes	12 months

When freezing fresh food with an “best before / best before / best date” date, you must freeze it before that date has expired.

 
Check that the food has not already been frozen. This is because frozen foods that have thawed completely should not be refrozen.



Once thawed, food should be eaten quickly.

- To avoid spoilage of food due to transfer of germs: Store unpackaged animal and plant products separately in drawers. This also applies to different kinds of meat.
- If food needs to be kept together for lack of space: wrap it.
- Never store fruits and vegetables on a balcony with meat or fish.

Food	Storage period
Butter	90 days
Hard cheese	110 days
Milk	7 days
Sausage, cold meats	9 days
Meat	7 days

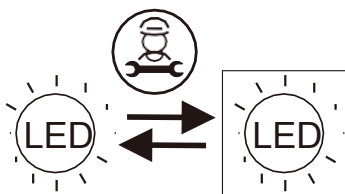

Replaceable light source (LED only) by a professional. This product contains two light sources of energy efficiency class G.

## Refrigerant



Danger ; risk of fire /  
flammable materials

## Danger ; risk of fire / flammable materials

**WARNING** : When positioning the device, make sure that the power cord is not pinched or damaged.

**WARNING** : Do not place multiple socket outlets or portable power supplies on the back of the device.

The refrigerant gas contained in the circuit of this device is isobutane (R 600a), a low-polluting but flammable gas.

When transporting and installing the appliance, take care not to damage any part of the refrigeration circuit.

Do not use any sharp or pointed tools to defrost the unit.

Do not use any electrical appliance inside the appliance.



Suitable for food

## INSTRUCTIONS FOR USE

### DEVICE IDENTIFICATION

On each similar is glued a sign located in the refrigerator on the side adjacent to the box for fruits and vegetables

### CHARACTERISTICS

The most important feature of this device is:

Automatic defrosting of the refrigerator cell. The defrost water is conveyed into a tank placed on the compressor from where it evaporates with the heat generated during the refrigeration process.

### WARNING!

When you install your refrigeration appliance, it is important to take into account the climatic class of the product. To find out which climate class your refrigerator belongs to, please check the data plate as shown below: The refrigeration appliance operates correctly within the ambient temperature range shown in the table, depending on the climate class.

Class	Symbol	Average ambient temperature ° C
temperate enlarged	SN	from + 10 to + 32
temperate	N	from + 16 to + 32
subtropical	ST	from + 16 to + 38
Tropical	T	from + 16 to + 43

### PLACE

The device must be installed away from heat sources such as radiators, boilers, direct sunlight, etc. Make sure that air can circulate freely around the back of the cabinet. To ensure optimum performance, if the appliance is placed under an overhanging wall unit, the minimum distance between the top of the booth and the wall unit must be at least 100 mm. Ideally, the device should not be placed under a surface mounted wall unit. Precise leveling is provided by one or more adjustable feet at the base of the cabinet.

### FOR REFRIGERANT APPLIANCES WITH A CLIMATE CLASS:

- extended temperate (SN): this refrigeration appliance is intended for use at ambient temperatures between 10 ° C and 32 ° C;
- temperate (N): this refrigeration appliance is intended for use at ambient temperatures between 16 ° C and 32 ° C;
- subtropical (ST): this refrigeration appliance is intended for use at ambient temperatures between 16 ° C and 38 ° C;
- tropical (T): this refrigeration appliance is intended for use in ambient temperatures between 16 ° C and 43 ° C.

## MEANING OF THE \*-LABELLING OF FREEZERS

- i** 1- (\*), 2- (\*\*), and 3-stars (\*\*\*) freezers are **not** suitable for freezing **fresh** food.
- i** 2-stars (\*\*) and 3-stars (\*\*\*) freezers are suitable for storing frozen food (**pre-frozen**) and ice or for making ice and ice cubes.

COMPARTMENTS	STARS (*)	TARGET STORAGE TEMPERATURE	SUITABLE FOOD
FREEZER	(***)*	$\leq -18\text{ }^{\circ}\text{C}$	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>3 months</b></li> <li><b>i</b> <b>Suitable</b> for freezing <b>fresh</b> food.</li> </ul>
FREEZER	***	$\leq -18\text{ }^{\circ}\text{C}$	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>3 months</b></li> <li><b>i</b> <b>Not suitable</b> for freezing <b>fresh</b> food.</li> </ul>
FREEZER	**	$\leq -12\text{ }^{\circ}\text{C}$	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>2 months</b></li> <li><b>i</b> <b>Not suitable</b> for freezing <b>fresh</b> food.</li> </ul>
FREEZER	*	$\leq -6\text{ }^{\circ}\text{C}$	<ul style="list-style-type: none"> <li>➤ Suitable for seafood (fish, shrimps, shellfish), freshwater and meat products.</li> <li>➤ Recommended storage period: <b>1 month</b></li> <li><b>i</b> <b>Not suitable</b> for freezing <b>fresh</b> food.</li> </ul>
0* - COMPARTMENT	-	$-6\text{ }^{\circ}\text{C} - 0\text{ }^{\circ}\text{C}$	<ul style="list-style-type: none"> <li>➤ Suitable for fresh meat products (pork, beef, chicken, etc.) and processed food consumed or processed within the same day or within the next three days after storage (max.).</li> <li><b>i</b> <b>Not suitable</b> for freezing food or for storing frozen food.</li> </ul>



**Warning !** The appliance must be able to be disconnected from the electrical network; the plug must therefore be easily accessible after installation.

#### **ELECTRICAL CONNECTION**

Check that the voltage values of the electrical network can withstand those indicated on the characteristics plate placed at the bottom left in the internal part of the refrigerator.

If the outlet is not equipped with an earthed socket, or if the plug is not suitable for your network, we advise you to contact a specialized electrician.

Do not use adapters or taps to avoid heating and burning.

If the appliance is not equipped with an electrical outlet, it will have to be connected to the network by means of a switch which will be connected directly to the power supply terminals. This switch must guarantee a single-pole disconnection of the device with separation of the contacts of not less than 3 mm.

#### **MAINTENANCE**

It is advisable to periodically clean the refrigerator:

a) outside, with a cloth dampened with a solution of lukewarm water and liquid soap and then rinse with clean water;

b) inside, remove the plug from the socket, wait until the appropriate compartment has defrosted; the interior of the refrigerator, the shelves, the shelves can be cleaned with lukewarm water and baking soda, rinsed with water and wiped dry; do not use abrasive detergents and take care that water does not enter the thermostat box.

In the rear part of the thermostat box is the internal lighting lamp. If the appliance is to remain inactive for a long time, it is advisable to disconnect the power and leave the door ajar to avoid the formation of bad odors.

#### **TECHNICAL ASSISTANCE**

 
Before calling after-sales service, if the refrigerator is not in operation, check that the power plug is correctly inserted in the outlet and that the thermostat is not in position "0"; if the refrigerator makes noise, check the leveling and check that there is no object in contact with the rear wall; if the refrigerator is not performing sufficiently, check that the interior is not full, that the door closes and that the condenser is not full of dust.

If there should be water in the lower part of the refrigerator (vegetable drawer and extractable top) check that the hole allowing the defrost water to flow is not blocked. The installation is the responsibility of the buyer. Our company is not responsible for damage due to improper installation and declines all responsibility in the event that the earth connection does not comply with the National Standards in force.

At the end of the functional life of the device using R 600a refrigerant gas (isobutane) and flammable gas inside the insulating foam, the device must be set up in a safe state before its disposal. For information relating to this operation, contact your trusted dealer or the local body in charge.

**CAUTION: Do not damage the refrigerant circuit.**

## PARTS AND FEATURES

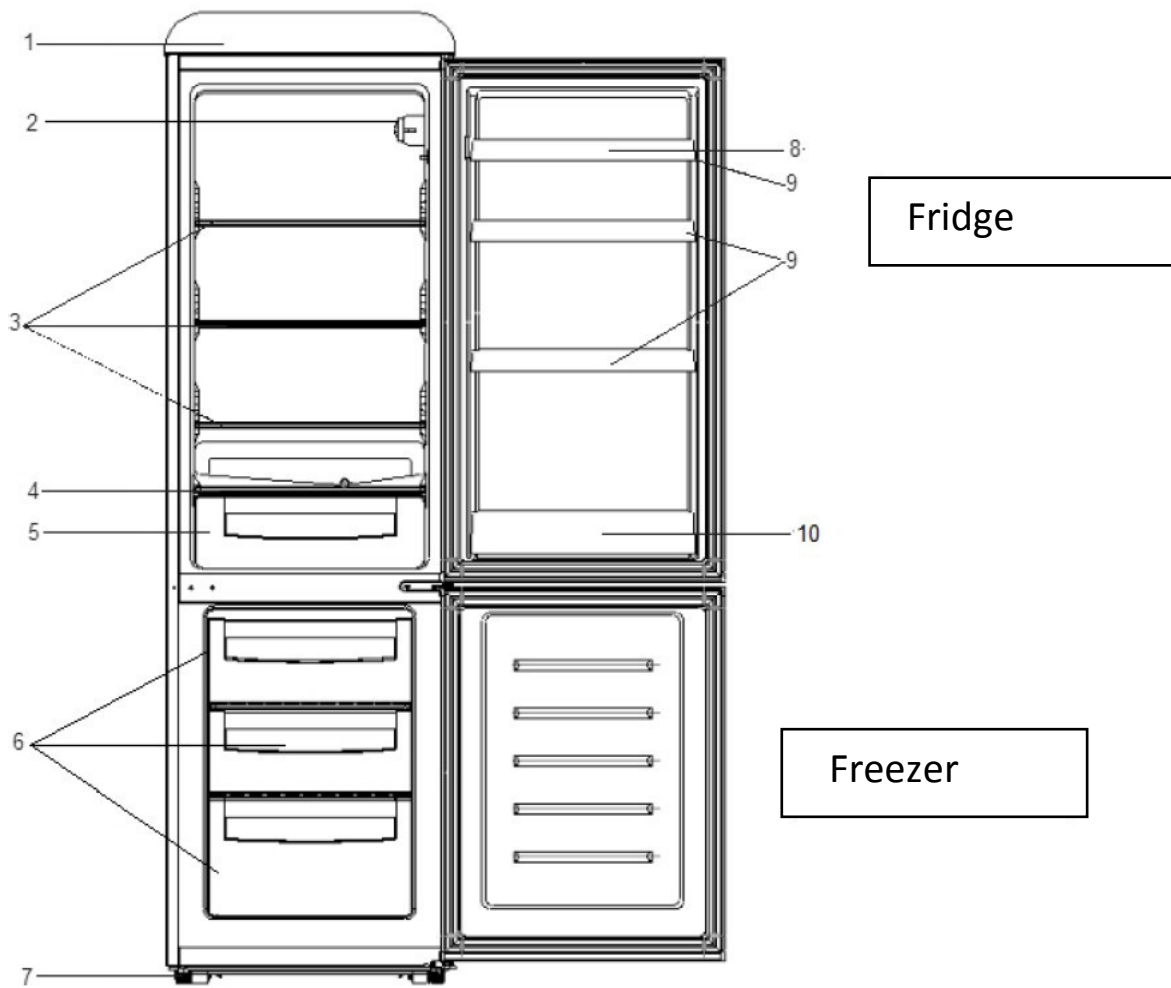


- |                            |                    |
|----------------------------|--------------------|
| 1. Top of the refrigerator | 6. Drawers         |
| 2. Thermostat              | 7. Adjustable foot |
| 3. Fridge shelves          | 8. Egg compartment |
| 4. Vegetable drawer cover  | 9. Shelves         |
| 5. Vegetable drawer        | 10. Bottle shelves |



The drawing, the number of shelves are only indicative. Non-contractual document which may be subject to modifications

### Installation Instructions

 
1. Make sure that the device remains upright during transport. Do not tilt the device more than 45 degrees when moving it. Do not exert pressure on the condenser, the door and its handle to avoid deformations or disturbances of the functioning of the refrigerator.

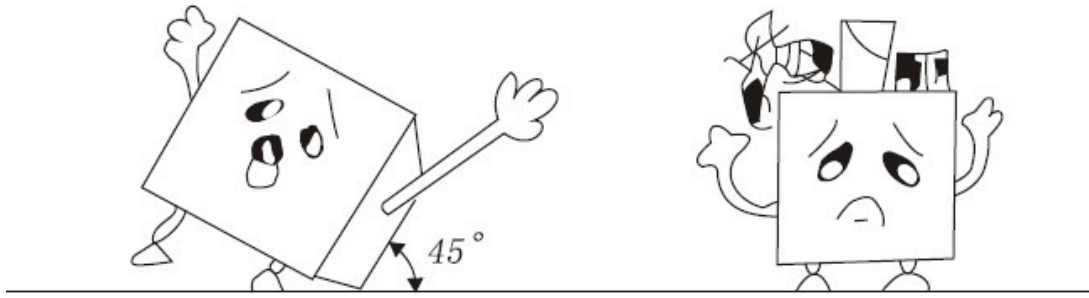

2. Make sure there is enough space around the refrigerator for it to function well. Allow a dozen cms of free space at the back and sides of the unit so that air can circulate to cool the compressor. Also leave about thirty centimeters above it.
3. Place the device away from direct sunlight and heat sources (stoves, heater, radiators, etc.). Direct sunlight can damage the acrylic coating and heat sources can increase electricity consumption. Extremely cold ambient temperatures can also cause malfunctions. Avoid placing the device in humid places. If there is too much humidity in the air, there will quickly be frost on the evaporator.

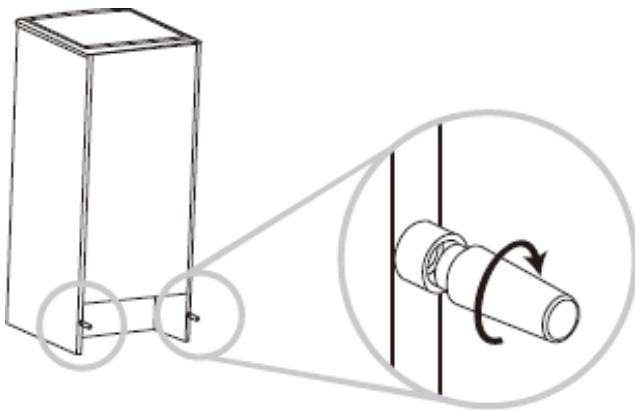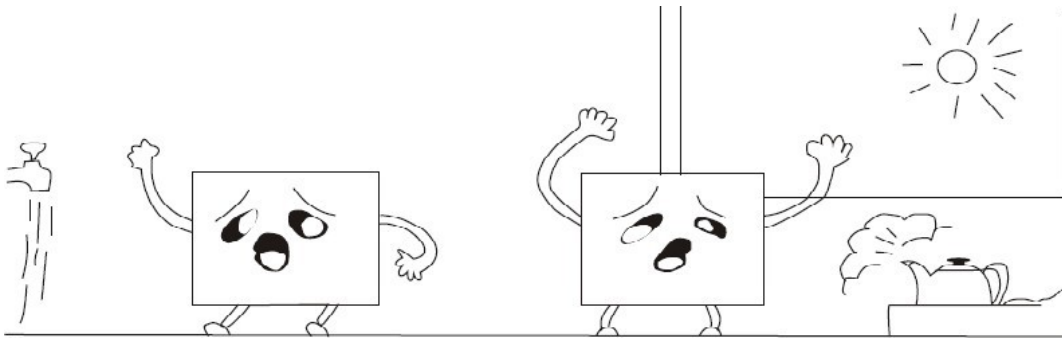  

 Place the device against a wall with a free distance not exceeding 50-75mm

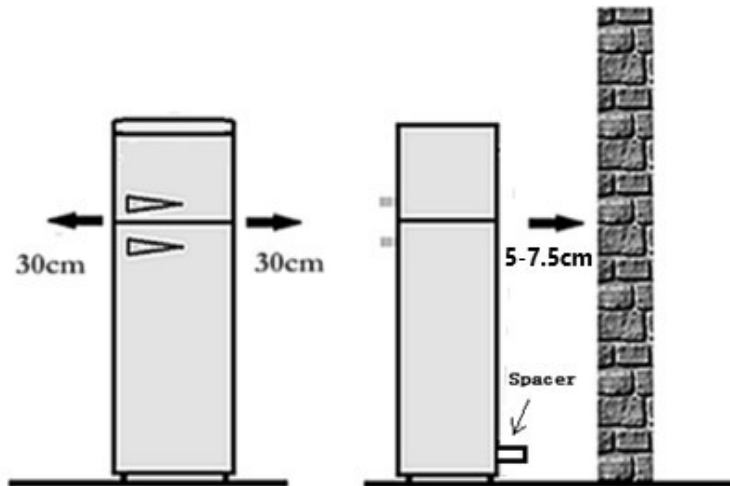

This product complies with the requirements imposed by directives 2014/35 / EU (repealing directive 73/23 / EEC amended by directive 93/68 / EEC) and 2014/30 / EU (repealing directive 89/336 / EEC)

### Read all instructions before using the appliance

- This appliance is intended for domestic and indoor use only.
- Children should be supervised to ensure that they do not play with the appliance.
- CAUTION: Keep the ventilation openings in the enclosure of the appliance, in its exterior part or in its built-in structure free from any obstruction.
- CAUTION: Do not damage the refrigeration circuit.
- CAUTION: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- CAUTION: Do not use electrical appliances inside the food storage compartment, unless they are of the type recommended by the manufacturer.
- Before throwing away your appliance: remove the door, leave the shelves in place so that children cannot easily play inside.
- Never allow children to operate or play with the appliance.
- Never clean any parts of the appliance with flammable fluids. The fumes represent a fire hazard or can cause explosions.
- Do not store or use gasoline or other flammable gases or liquids near this appliance. Fumes can cause fire or explosion.
- Do not install this device in a place with extreme climatic conditions such as: insufficient ventilation, temperatures below 10 ° C or above 30 ° C

### Cool zone

This is where you need to store foods that can be kept longer if you keep them fresh. Milk, yogurt, fruit juice, hard cheeses, e.g. cheddar.

Bottles and other open jars of salad dressings, sauces and jams. Fat, e.g., butter, margarine, lowfat spreads, fried foods and bacon. Eggs.

### Coldest zone: 1 ° C to 5 ° C

This is where to put the food that must be cold to be stored safely. More generally, it is any fresh product for which the use-by date (DLC) is associated with a storage temperature less than or equal to + 4 ° C.



- Raw and uncooked foods should always be wrapped.
- Refrigerated precooked foods, e.g. ready-to-eat foods, meat pies, soft cheeses.
- Pre-cooked meats, for example ham.
- Prepared salads (including mixed, chopped, pre-washed, prepackaged green salads, rice, potato salad, etc.).
- Desserts, for example cream cheese, home cooked food and leftovers or cream cakes.

### **Salad tray**

This is the wettest part of the Refrigerator.

Vegetables, fruits, pieces of fresh salad, e.g. whole unwashed lettuce, whole tomatoes, radishes, etc. ... WE RECOMMEND THAT ALL PRODUCTS PRESERVED IN THE SALAD CONTAINER BE PACKAGED.

### **REMARK :**

ALWAYS PACK AND STORE RAW MEAT, CHICKEN AND FISH ON THE LOWEST SHELF AT THE BOTTOM OF THE REFRIGERATOR. THIS WAY THEY WILL NOT DRAIN ON OR TOUCH OTHER FOODS. DO NOT STORE GAS OR FLAMMABLE LIQUID

### **Freezer**

#### **Upper freezer drawer**

Storage of frozen foods such as ice cream.

#### **Middle / lower freezer drawer**

Storage of fresh meat and fish or dry food, divided into small portions.

#### **Remark:**

To get more space, you can store the food after removing the drawers and the ice cube tray. The freezer compartment storage volume is calculated after removing the ice cube tray, ice drawer, and top and middle freezer drawers.

### **Food packaging**

Pack foods in portions that suit your needs.

Portions of fruits and vegetables should not exceed 1 kg, those of meat can reach 2.5 kg.

Small portions freeze faster and help preserve food quality better when defrosting and preparing meals.

It is important to package foods in airtight bags or containers before freezing to prevent them losing their taste or becoming dehydrated.

Wrap the food, expel the air, and seal the bag or container tightly.

#### **Appropriate packaging:**

Plastic bags, stretch film, aluminum foil and freezer trays. You can get these packaging from your usual retailers.

**Inappropriate packaging:**

Wrapping paper, greaseproof or cellophane, garbage bags or bags that have already been used.

 
**Suitable sealing devices:**

Elastics, plastic clips, cords, ties for freezer bags or similar device. Plastic films and bags can be sealed using a special iron or press.


**Before placing the package in the freezer, affix a label with the description of the contents and the date of freezing.**

**Precautions:**

1. Plug the machine into a properly installed and grounded proprietary wall outlet. Never cut or remove (for any reason) the third wire (ground) from the power cord. Any questions regarding power or grounding should be addressed to a licensed electrician or to a center authorized to work on this type of product.  
Warning: If the grounded plug is used improperly, there may be a risk of electric shock.
2. The installation socket must always be fitted with an earth connection. If the current supply is not connected to earth; you do not need to connect the device

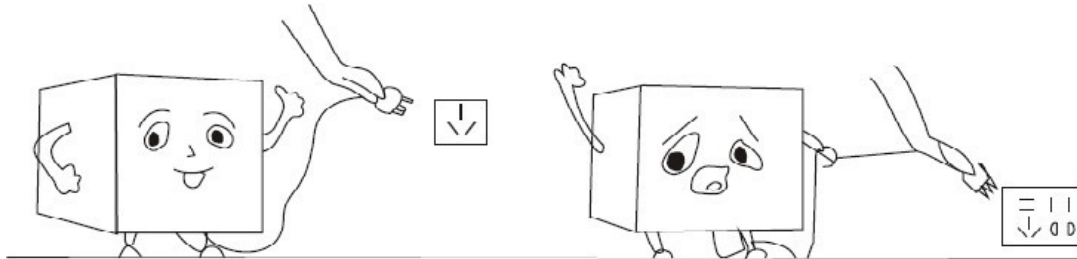

 3. Do not throw water on the refrigerator: it can cause equipment failure or risk of electric shock.
4. Do not store or use gasoline or other flammable gases or liquids near this appliance. Fumes can cause fire or explosion.

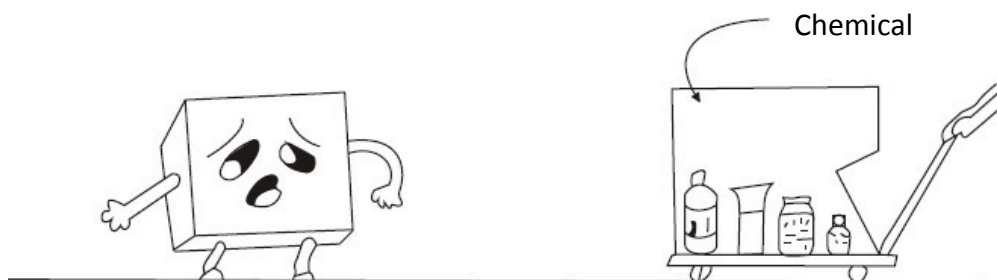**Use:**

1. Before connecting the appliance to the electric current, let it stand for about two hours. This will reduce the risk of malfunction in the cooling system, due to handling during transport. Run your product about 2/3 hours before adding food

**CAUTION:** To avoid a danger caused by instability of the appliance, it must be installed and secured in accordance with the instructions in the installation manual.

2. Using the thermostat:

 
To regulate the temperature in the refrigerator, turn the thermostat knob from right to left. The thermostat can be set to any position from "0" (off) to "7" (coldest).

For normal use, please select position "5"

when the setting is 0, the device is switched off. When the setting is 7, the compressor does not stop, the internal temperature can be  $-4\text{ }^{\circ}\text{C} \sim 6\text{ }^{\circ}\text{C} / -25\text{ }^{\circ}\text{C}$

For normal use, please select position "5"

3. Do not put too much food in the appliance. Do not open the door too often to maintain the interior temperature and save electricity.

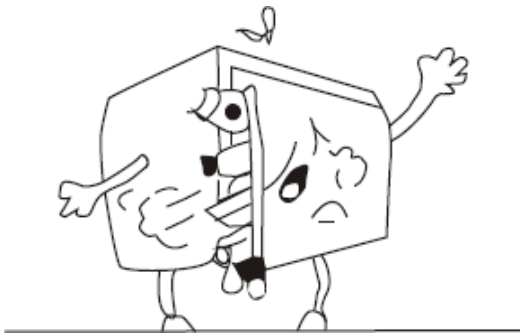

**Defrost:**

In order to allow the appliance to function correctly, it is necessary to defrost at the least once a year or when the ice cover is greater than 10 mm.

From time to time you can remove the layer of ice that has formed using a squeegee or other plastic instrument.

**NEVER USE A METAL OR AN ELECTRICAL DEVICE TO DEFROST.**

**Warnings :**

- When defrosting, never use a sharp or metallic object to remove ice from the surface of the evaporator to avoid damaging the evaporator.
- Reconnect the power again after more than 15 minutes.

**To defrost:**

To defrost the device, choose a period when your device is not overcharged. Remove all the food, place it in another refrigerator or in a very cool place. Set the thermostat to the off position (0), unplug the appliance and open the door. Once the frost has melted, remove the water and dry the interior of the refrigerator.

 
Wait 15 minutes then reconnect the device. You can then restart the refrigerator by turning the thermostat to the desired setting.

**CARE AND MAINTENANCE**

1. Cleaning your Refrigerator:


- Unplug the device

- Wash the inside with hot water and a baking soda solution. To do this, add about tablespoons of baking soda to a quart of water.

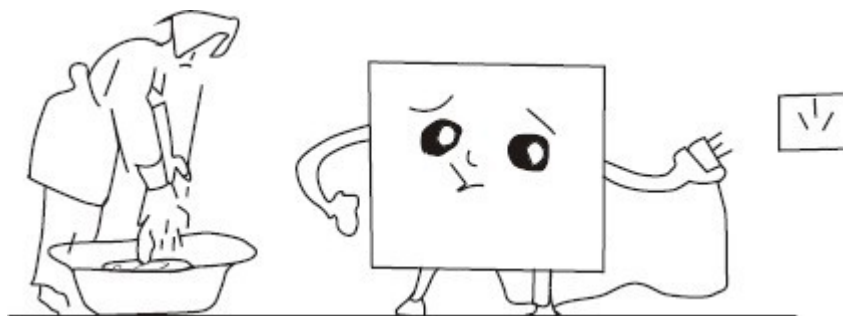

2. Wash shelves and trays with a mild detergent solution. The exterior of the appliance should be cleaned with a mild detergent and warm water.

 3. Never use acids, solvents, gasoline or similar products to clean the refrigerator, as they can damage the paint or the plastic parts of the appliance.

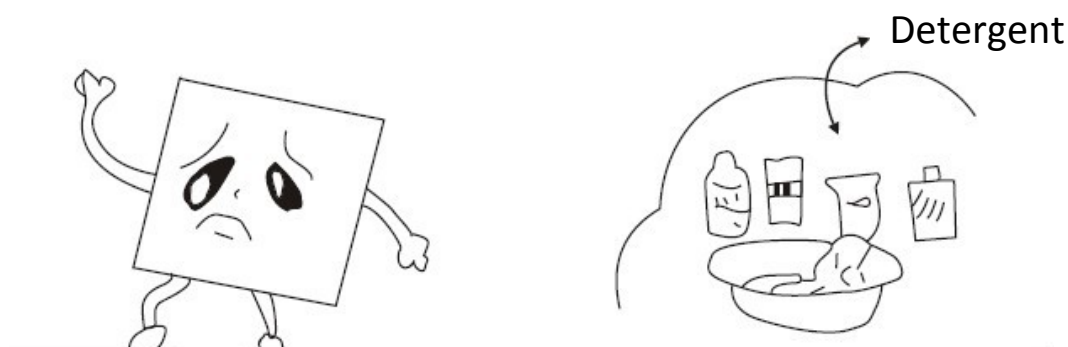

## TROUBLESHOOTING GUIDE

1. The refrigerator does not work, the light does not work:
  - The device is not plugged in
  - The switch is in the off position.
2. The refrigerator is not cold enough:
  - Thermostat temperature is not set correctly.
  - The outdoor environment may require a higher setting.
  - The door is opened too often, or the door is not fully closed.
  - The door seal is not tight enough.
  - There is not enough space between the appliance and the walls behind and to the sides.
3. The refrigerator seems to make too much noise:
  - The rustling may come from the refrigerant flow, which is normal.
  - At the end of each cycle, you may hear a gurgling sound due to the flow of refrigerant through your appliance.
  - The contraction and expansion of the interior walls can cause crackling and crackling.
  - The appliance is not level.

#### Notes:

Avoid placing the device in humid places. If there is too much humidity in the air, there will quickly be frost on the evaporator.

During periods of high relative humidity, condensation may form on the surface of the refrigerator. It is not a malfunction. Clean the surface. If the refrigerator does not operate properly after all these checks, contact Technical Service without further delay.

Keep the invoice or proof of purchase of the product to be able to use the warranty. For any questions during use, please contact your store.

## DISPOSAL



The European Directive 2012/19 / EU on Waste Electrical and Electronic Equipment (WEEE) requires that used household appliances not be thrown into the normal stream of municipal waste. Used devices must be collected separately in order to optimize the recovery rate and recycling of the materials they are made of and reduce the impact on human health and the environment.

The crossed-out wheeled bin symbol is affixed to all products to remind you of the obligations of separate collection. Consumers should contact the local authorities or their dealer regarding the procedure to follow for the removal of their device.

Information on the meaning of the compliance



The CE marking indicates that the product meets the main requirements of European Directives 2014/35 / EU (Low Voltage), 2014/30 / EU (Electromagnetic Compatibility), 2011/65 / EU (Reduction of the use of certain hazardous substances in EEE).

## COLDEST ZONE IN THE REFRIGERATOR



The symbol opposite indicates the location of the coldest zone in your refrigerator.

This zone is delimited at the bottom by the glass of the vegetable drawer, and at the top by the symbol or the shelf positioned at the same height.

To ensure the temperatures in this area, be careful not to change the positioning of this shelf. In forced-air refrigerators (equipped with a fan or No Frost models), the symbol of the coldest zone is not shown because the temperature inside them is homogeneous.

## TEMPERATURE INDICATOR INSTALLATION

To help you adjust your refrigerator properly, it is equipped with a temperature indicator that will allow you to control the average temperature in the coldest zone. CAUTION: This indicator is intended to work only with your refrigerator, be careful not to use it in another refrigerator (in fact, the coldest zone is not the same), or for any other use.

### **CHECKING THE TEMPERATURE IN THE COLDEST ZONE**

Thanks to the temperature indicator, you can regularly check that the temperature of the coldest area is correct. Indeed, the temperature inside the refrigerator depends on several factors such as the ambient temperature of the room, the quantity of foodstuffs stored, the frequency of opening of the door. Take these factors into consideration when setting up the device.

 
When the indicator shows “OK”, it means that your thermostat is correctly adjusted, and that the interior temperature is correct.

If the color of the indicator is white, it means that the temperature is too high, in this case it is necessary to increase the thermostat setting and wait 12 hours to carry out a visual check of the indicator again.

After loading or opening the door, the indicator may turn white after a few moments.



Correct setting

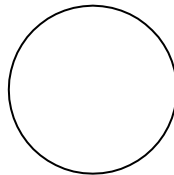


Temperature too high,  
adjustable thermostat

### **Tips - Energy savings**

 - Install the appliance in a cool, dry and well-ventilated room.  
Take care not to expose the device to direct sunlight and never place it near a direct source of heat (near a radiator, for example).
- Never block the appliance's ventilation openings or grilles.
- Allow food to cool before placing it in the appliance. Place frozen products in the refrigerator to thaw them.
- The low temperature of frozen food will help cool the food in the refrigerator.

- Defrost the freezer when ice has accumulated. A thick layer of ice may impair the transfer of cold to the frozen products and thus increase the energy consumption of the appliance.
- Do not leave the appliance doors open for too long when storing or removing food from the appliance.
- Ice will form less in the freezer if you leave the door open for as little time as possible.
- When freezing food or want to store food in the freezer, place it directly in the upper freezer compartment.

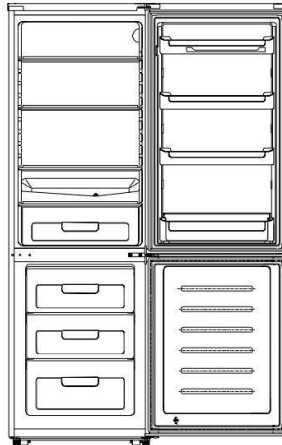

## **GUARANTEE**

The warranty does not cover wearing parts of the product, nor problems or damage resulting from:

- (1) surface deterioration due to normal wear and tear of the product;
- (2) defects or deterioration due to contact of the product with liquids and due to corrosion caused by rust or the presence of insects;
- (3) any unauthorized incident, abuse, misuse, modification, disassembly or repair;
- (4) any improper maintenance operation, use not in accordance with the instructions concerning the product or connection to an incorrect voltage;
- (5) any use of accessories not supplied or approved by the manufacturer.

The warranty will be void if the nameplate and / or serial number of the product is removed.

## **Product warranty and spare parts available**

Under the terms of the applicable manufacturer's warranty, the use of Customer Service is free. The minimum warranty period (manufacturer's warranty for private consumers) in the European Economic Area is 2 years according to the warranty terms applicable to the place. The warranty conditions do not affect any other rights or claims held by you under local law. Detailed information on the warranty period and warranty conditions in your country are available from customer service, your dealer, or our website.

Original spare parts that function according to the relevant Eco-design Directive can be obtained from customer service for a period of at least 4 years from the date your device is placed on the market in the European Economic Area.

For more technical specifications on the repair agent and to order replacement parts, please visit: <https://www.schneiderconsumer.com>

## **ENERGY LABELING REGULATION DATA SHEET: 2019/2016 / EU**

The product information sheet according to EU Regulation No. 2019/2016 The energy labeling of refrigeration appliances can be found under the URL or QR code indicated on the energy label:

SCB300VR - URL: <https://eprel.ec.europa.eu/qr/363813>

SCB300VB - URL: <https://eprel.ec.europa.eu/qr/363822>

SCB300VVA - URL: <https://eprel.ec.europa.eu/qr/363826>

SCB300VBL - URL: <https://eprel.ec.europa.eu/qr/363827>

SCB300VWR - URL: <https://eprel.ec.europa.eu/qr/363839>

SCB300VCR - URL: <https://eprel.ec.europa.eu/qr/363841>

## **Relationship between the energy label 1060/2010 / EU and the new energy label 2019/2016 / EU**

The current 1060/2010 / EU label uses the A +++ / D labeling system, which has become less effective. The mixed scale of the label with many "+" is no longer transparent and the majority of products are already in the first 2 to 3 classes today. Therefore, the European Union has revised and optimized the label according to the needs of users. The new 2019/2016 / EU energy label will only contain energy classes A to G. The class levels will be regularly updated.

Imported by SCHNEIDER CONSUMER GROUP  
12, rue Jules Ferry, 93110 Rosny-sous-Bois, FRANCE



**SCHNEIDER**

[www.schneiderconsumer.com](http://www.schneiderconsumer.com)