




6. Cuisson en plusieurs étapes


Deux étapes peuvent être définies au maximum. Si l'une des étapes est la décongélation, elle doit automatiquement être la première étape. L'avertisseur sonore retentit une fois après chaque étape et l'étape suivante commence.

Remarque : Minuteur de cuisine, Menu automatique ou Préchauffage ne peuvent pas être définis en tant qu'étapes de la cuisson en plusieurs étapes.

Par exemple, si vous voulez décongeler les aliments pendant 5 minutes, puis les cuire avec 80 % de la puissance des micro-ondes pendant 7 minutes. Les étapes sont les suivantes :

- 1) Appuyez une fois sur « Décongélation en fonction de la durée », l'écran affiche « d02 ».
- 2) Tournez «  » pour ajuster la durée de décongélation de 5 minutes ;
- 3) Appuyez une fois sur « Micro-ondes », « P100 » clignote à l'écran
- 4) Appuyez sur « **Démarrer/+30Sec./Confirmer** » pour confirmer la fonction. « P100 » s'affiche.
- 5) Tournez «  » pour choisir 80 % de la puissance des micro-ondes jusqu'à ce que « P80 » s'affiche ;
- 6) Appuyez sur « **Démarrer/+30Sec./Confirmer** » pour confirmer.
- 7) Tournez «  » pour ajuster la durée de cuisson de 7 minutes ;
- 8) Appuyez sur « **Démarrer/+30Sec./Confirmer** » pour lancer la cuisson.

7. Cuisson rapide au micro-ondes

- 1) En mode veille, appuyez sur « **Démarrer/+30Sec./Confirmer** » pour lancer la cuisson avec 100 % de la puissance pendant 30 secondes. Chaque pression supplémentaire augmente la durée de cuisson de 30 secondes, jusqu'à 95 minutes.
- 2) En mode veille, tournez «  » vers la droite pour choisir directement la durée de cuisson puis appuyez sur la touche « **Démarrer/+30Sec./Confirmer** » pour cuire avec 100 % de la puissance des micro-ondes.

8. Fonction de verrouillage-sécurité enfants

- Verrouillage : En mode attente, appuyez sur « **Arrêt/Effacer** » pendant 3 secondes. Un long bip est émis, indiquant le passage en mode verrouillage-sécurité enfants et le four affiche « 0:00 ».
- Déverrouillage : En mode verrouillé, maintenez « **Arrêt/Effacer** » enfoncé pendant 3 secondes. Un long « bip » est émis, indiquant que le verrouillage est désactivé.

9. Fonction de vérification

- 1) En mode cuisson aux micro-ondes, appuyez sur « Micro-ondes ». La puissance en cours s'affiche pendant 3 secondes. Après 3 secondes, le four retourne au mode précédent ;
- 2) En mode cuisson, appuyez sur « **Minuterie/Horloge** » pour afficher le temps de cuisson. Le temps de cuisson clignote pendant 3 secondes.

10. Menu automatique

- 1) En mode attente, tournez «  » vers la gauche pour choisir le menu. « A-8 » à « A-1 » s'affiche.
- 2) Appuyez sur « **Démarrer/+30Sec./Confirmer** » pour confirmer le menu souhaité.
- 3) Tournez «  » pour choisir le poids du menu. L'indicateur « g » s'allume.
- 4) Appuyez sur « **Démarrer/+30Sec./Confirmer** » pour lancer la cuisson.

Tableau du menu automatique

| Menu | Poids | Affichage |
|---------------------------|------------------------|-----------|
| A-1 Réchauffage | 200 g | 200 |
| | 400 g | 400 |
| A-2 Viande | 250 g | 250 |
| | 350 g | 350 |
| | 450 g | 450 |
| A-3 Légumes | 200 g | 200 |
| | 300 g | 300 |
| | 400 g | 400 |
| A-4 pâtes | 50 g (avec eau 450 g) | 50 |
| | 100 g (avec eau 800 g) | 100 |
| A-5 Pommes de Terre | 1 | 1 |
| | 2 | 2 |
| | 3 | 3 |
| A-6 Poisson | 250 g | 250 |
| | 350 g | 350 |
| | 450 g | 450 |
| A-7 Boissons | 1 (environ 120 ml) | 1 |
| | 2 (environ 240 ml) | 2 |
| | 3 (environ 360 ml) | 3 |
| A-8 Pop-corn | 50 g | 50 |
| | 100 g | 100 |

Guide de dépannage

| Normal | |
|--|--|
| Le four à micro-ondes créé des interférences | Il est normal que le four à micro-ondes en fonctionnement puisse perturber la réception de vos radios et téléviseurs. C'est un phénomène que l'on retrouve avec d'autres petits appareils électroménagers, par exemple les mixeurs, les aspirateurs et les ventilateurs. |
| Lumière faible du four à micro-ondes | En mode de puissance faible, il est normal que la cuisson à micro-ondes soit plus lente. |
| De la vapeur s'accumule et de l'air chaud sort des conduits | Pendant la cuisson, les aliments peuvent libérer de la vapeur. Un peu de vapeur pourra s'accumuler sur une surface froide comme la porte du four à micro-ondes. C'est normal. |
| Le micro-ondes a été accidentellement mis en marche alors qu'il ne contient pas d'aliment. | Il est interdit de faire fonctionner le micro-ondes sans aliments à l'intérieur. C'est très dangereux. |

| Problème | Cause possible | Solution |
|--|---|---|
| Impossible de mettre le micro-ondes en marche. | (1) Le câble d'alimentation n'est pas correctement branché | Attendez 10 secondes, puis rebranchez-le. |
| | (2) Le fusible a sauté ou le disjoncteur est activé. | Remplacez le fusible ou enclenchez de nouveau le disjoncteur (les réparations doivent être effectuées par un professionnel de notre société). |
| | (3) Il y a un problème avec la prise d'alimentation. | Testez-la avec d'autres appareils électriques. |
| Le micro-ondes ne chauffe pas. | (4) Sa porte n'est pas bien fermée. | Fermez correctement sa porte. |
| Le plateau en verre fait du bruit quand le four à micro-ondes est en fonctionnement. | (5) L'anneau tournant ou le bas du compartiment interne du four à micro-ondes est sale. | Vous référer au paragraphe Nettoyage de votre four à micro -ondes pour nettoyer les surfaces sales. |

Entretien et nettoyage

Assurez-vous de débrancher l'appareil de l'alimentation électrique.

1. Après l'utilisation, nettoyez la cavité du micro-ondes avec un chiffon légèrement humide.
2. Nettoyez les accessoires avec de l'eau savonneuse.
3. Le cadre de la porte, le joint et les parties proches doivent être soigneusement nettoyés avec un chiffon humide quand ils sont sales.
4. N'utilisez pas de produit d'entretien abrasif ni de grattoir métallique dur pour nettoyer le verre de la porte du micro-ondes, car cela rayerait la surface du verre, ce qui peut le briser.
5. Conseil de nettoyage - Pour faciliter le nettoyage des parois intérieures du micro-ondes pouvant entrer en contact avec les aliments cuits : Placez un demi-citron dans un bol, ajoutez 300 ml d'eau et chauffez avec 100% de la puissance de micro-ondes pendant 10 minutes. Essuyez la cavité du micro-ondes avec un chiffon sec et doux.

Spécifications techniques

| | |
|---|-----------------|
| Modèle : | SCMW2028SDB |
| Tension nominale : | 230V~ 50Hz |
| Puissance d'entrée nominale: | 1400W |
| Puissance de sortie nominale (micro-ondes): | 900 W |
| Capacité du four : | 28 L |
| Diamètre du plateau tournant : | 288 mm |
| Dimensions extérieures : | 495*395*290mm |
| Poids net : | Environ 12.88kg |

shaken and the temperature checked before consumption, in order to avoid burns.

- Regarding the instructions for cleaning and use maintenance, especially of door seals, cavities and adjacent parts, refer to the following paragraph of the user manual.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance must not be placed in a cabinet.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.


- The microwave oven is intended to be used freestanding.

This product is a Group 2 ISM equipment class B. Group 2 includes all equipment ISM (Industrial, Scientific and Medical) radio frequency energy which is intentionally generated and / or used in the form of radiation

Electromagnetic for the treatment of materials and equipment EDM. The Class B includes equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network that supplies domestic premises.

Installation

1. Select a level surface with a sufficient open space for the inlet openings and / or air outlet.

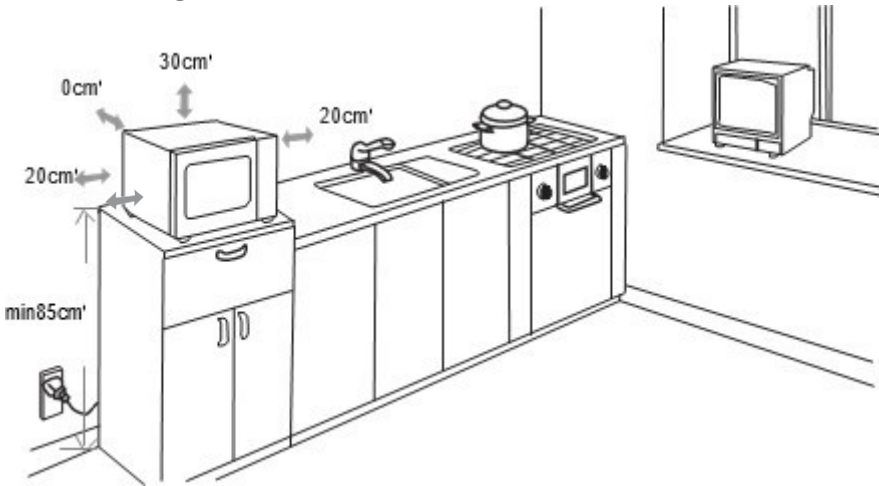

- (1) The minimal mounting height is 85 cm.
- (2) The back of the device must be placed against a wall.
Leave a minimum gap of 30 cm above the oven and 20 cm between the oven and each wall.
- (3) Do not remove the feet underneath the microwave oven.
- (4) Block the inlet and / or air outlet apertures may damage the oven.

(5) Make sure that the microwave oven is as far away as possible from TVs and radios. Using a microwave oven can cause interference disturbing the reception of your radio or television.

2. Plug your oven into a wall outlet. Make sure that the voltage and frequency of the current it supplies are identical to those indicated on the nameplate of the unit.

WARNING: Do not install oven over a cooktop or other device that produces heat. If the oven is installed near or above a heat source, it may cause damage and void your warranty.

IMPORTANT

It is forbidden to replace the power cable by yourself. If damages must be repaired by the service of local distributors, by the manufacturer or by a qualified person.

**If the unit is fallen visit qualified to check before using again.
Internal damage may cause accidents.**

For all types of problems or repairs, please contact the after-sales service of local dealer, the manufacturer or qualified person to avoid hazard.

Disposal and environmental responsibility

In order to be environmentally friendly, we encourage you to take this device correctly. You can contact your local authorities or recycling centers for more information.

Read the instructions carefully before use.

This product complies with the requirements of Directive 2014/35/EU (repealing Directive 73/23/EEC as amended by Directive 93/68/EEC) and 2014/30/EU (repealing Directive 89/336/EEC).



Description of your product



Names of parts and accessories from the oven

Remove the microwave oven and all parts of the box.

The oven comes with the following:


| | |
|---------------------------|----------|
| Glass | 1 |
| Guide ring | 1 |
| Instruction Manual | 1 |



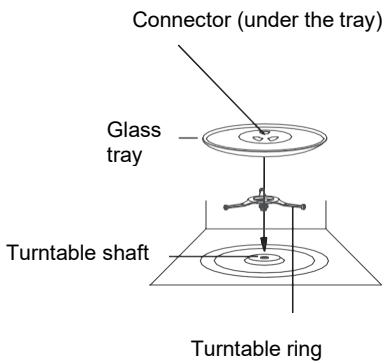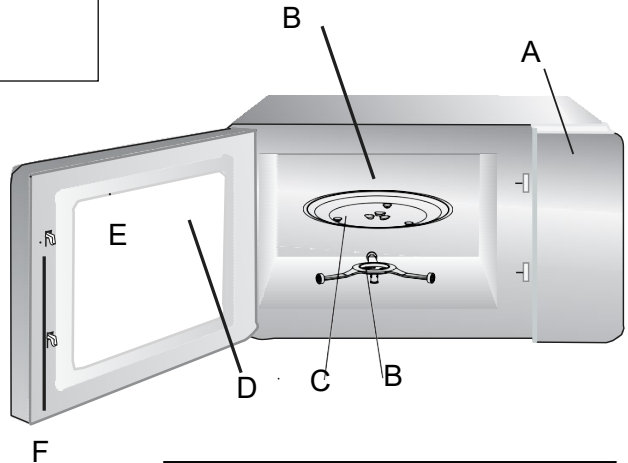



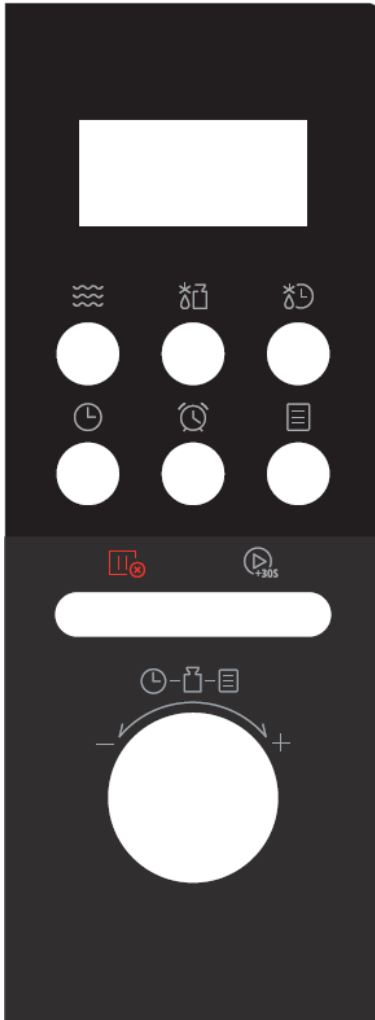


- A. Control panel
- B. Axis of the turntable
- C. Glass tray
- D. Observation Window
- E. Door assembly
- F. Safety interlock system



- a. Never place it upside down glass top. Make sure that the rotation of the glass tray is not obstructed.
- b. The glass tray and the turntable support should always be installed in the microwave during use.
- c. All food and food containers must always be placed on the glass tray for cooking.
- d. If glass tray or turntable cracks or breaks, contact your authorized service center after sales service.

Control Panel and Features

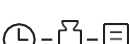

-  Microwave
-  Weight defrost
-  Time defrost
-  Clock
-  Kitchen timer
-  Auto menu
-  Stop/Clear
-  Start/+30Sec./Confirm
-  Timer-Weight-Auto menu

Operation instruction

Installing the microwave oven on a worktop

Remove all accessories and packaging elements. Examine the oven and make sure it does not include damage such that the door is not broken and it is not dented. Do not install the microwave oven if it is damaged.

Materials you can use in microwave oven

| <u>Utensils</u> | <u>Remarks</u> |
|-----------------------|--|
| Browning dish | Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break. |
| Dinnerware | Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes. |
| Glass jars | Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break. |
| Glassware | Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes. |
| Oven cooking bags | Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape. |
| Paper plates and cups | Use for short-term cooking/warming only. Do not leave oven unattended while cooking. |
| Paper towels | Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only. |
| Baking paper | Use as a cover to prevent splattering or a wrap for steaming. |
| Plastic | Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. |
| Plastic wrap | Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. |
| Thermometers | Microwave-safe only (meat and confection thermometers). |
| Wax paper | Use as a cover to prevent splattering and retain moisture. |

Materials to be avoided in microwave oven



| <u>Utensils</u> | <u>Remarks</u> |
|---------------------------------|--|
| Aluminum tray | May cause arcing. Transfer food into microwave-safe dish. |
| Food carton with metal handle | May cause arcing. Transfer food into microwave-safe dish. |
| Metal or metal-trimmed utensils | Metal shields the food from microwave energy. Metal trim may cause arcing. |

| | |
|--------------------|--|
| Twisted metal ties | May cause arcing and could cause a fire in the oven. |
| Paper bags | May cause a fire in the oven. |
| Plastic foam | Plastic foam may melt or contaminate the liquid inside when exposed to high temperature. |
| Wood | Wood will dry out when used in the microwave oven and may split or crack. |

Instructions for Use

1. Clock Setting


When the microwave oven is electrified, the screen will display " 0:00 ", buzzer will ring once.

- 1) In waiting state, press " **Clock** " twice, the screen displays " 0:00 " and the hour figure will flash.
- 2) Turn "  " to adjust the hour figures. The input time should be within 0--23.
- 3) Press " **Clock** ", the minute figures will flash.
- 4) Turn "  " to adjust the minute figures. The input time should be within 0--59.
- 5) Press " **Clock** " to finish clock setting.

Note: 1) The clock will not work if it is not set when powered.



- 2) After step 5, if you do not press " **Clock** " within 5 minutes, the oven will go back to the previous status automatically.

2. Kitchen Timer

- 1) In waiting state, press " **Kitchen Timer** " once, the screen displays " 00:00 ".
- 2) Turn "  " to set the kitchen timer. (The maximum cooking time is 95 minutes).
- 3) Press " **Start/+30Sec./Confirm** " to confirm setting.
- 4) When the kitchen time is reached, the buzzer will ring 5 times.
If the clock has been set (24-hour system), the screen will display the current time.

Note: The kitchen Time is different from 24-hour system, Kitchen Timer is a timer.

3. Microwave Cooking

- 1) Press " Microwave " once, " P100 " will flash on the screen.
- 2) Press " Microwave " repeatedly or turn "  " to select microwave power from P100 to P10.
- 3) Press the " **Start/+30Sec./Confirm** " to confirm the power.
- 4) Turn "  " to adjust the cooking time. (The maximum cooking time is 95 minutes.)
- 5) Press the " **Start/+30Sec./Confirm** " key to start cooking.


NOTE: The step quantities for the adjustment time of the coding switch are as follow:

| | |
|-------------|--------------|
| 0---1 min | : 5 seconds |
| 1---5 min | : 10 seconds |
| 5---10 min | : 30 seconds |
| 10---30 min | : 1 minute |
| 30---95 min | : 5 minutes |


Microwave Power Chart

| | | | | | |
|-------|------|--------|-----|-------|-----|
| Level | High | M.High | Med | M.Low | Low |
| Power | P100 | P80 | P50 | P30 | P10 |

4. Defrost by W.T.

- 1) In waiting state, press " Weight Defrost " once, the screen displays " d01 ".
- 2) Turn "  " to select the weight of food. The weight should be 100g-2000g.
- 3) Press " **Start/+30Sec./Confirm** " key to start defrosting.

5. Defrost by Time

- 1) In waiting state, press " Time Defrost " once, the screen displays " d02 ".
- 2) Turn "  " to adjust cooking time.(The maximum cooking time is 95 minutes.)




- 3) Press "**Start/+30Sec./Confirm**" key to start defrosting.

6. Multi-Stage Cooking


Two stages can be maximumly set. If one stages is defrosting, it should be put in the first stage automatically. The buzzer will ring once after each stage and the next stage will begin.

Note: Kitchen Timer, Auto menu or Preheating cannot be set as one of the multi-stages.

Example: if you want to defrost the food for 5 minutes, then to cook with 80% microwave power for 7 minutes. The steps are as following:

- 1) Press " Time Defrost " once, the screen will display " d02 ";
- 2) Turn "  " to adjust the defrost time of 5 minutes;
- 3) Press " Microwave " once, " P100 " will flash on the screen.
- 4) Press " Start/+30Sec./Confirm " to confirm the function. " P100 " will display.
- 5) Turn "  " to choose 80% microwave power till " P80 " display;
- 6) Press "**Start/+30Sec./Confirm**" to confirm;
- 7) Turn "  " to adjust the cooking time of 7 minutes;
- 8) Press "**Start/+30Sec./Confirm**" to start cooking.

7. Quick Microwave cooking

- 1) In standby state, press "**Start/+30Sec./Confirm**" to start cooking with 100% power for 30 seconds, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In Standby state, turn "  " right to choose cooking time directly then press "**Start/+30Sec./Confirm**" key to cook with 100% microwave power.



8. Lock-out Function for Children

- Lock: In waiting state, press "**Stop/Clear**" for 3 seconds, there will be a long beep denoting entering the children-lock state and the oven will display " 0:00 ".
- Lock quitting: In locked state, press "**Stop/Clear**" for 3 seconds, there will be a long " beep " denoting that the lock is deactivated.

9. Inquiring Function

- 1) In states of microwave cooking, press " Microwave " the current power will be displayed for 3 seconds. After 3 seconds the oven will turn back to the former state:
- 2) In cooking state, press " **Kitchen Timer/Clock** " to display the cooking time. The cooking time flashes for 3 seconds.

10. Auto Menu

- 1) In waiting state, turn "  " left to choose the menu, and " A-8 " to " A-1 " will display.
- 2) Press " **Start/+30Sec./Confirm** " to confirm the menu you need.
- 3) Turn "  " to choose the weight of menu, and "g" indicator will light.
- 4) Press " **Start/+30Sec./Confirm** " to start cooking.

Auto menu chart

| Menu | Weight | Display |
|------------------|-------------------------|---------|
| A-1 REHEAT | 200g | 200 |
| | 400g | 400 |
| A-2 MEAT | 250g | 250 |
| | 350g | 350 |
| | 450g | 450 |
| A-3 VEGETABLE | 200g | 200 |
| | 300g | 300 |
| | 400g | 400 |
| A-4 PASTA | 50g (with water 450 g) | 50 |
| | 100g (with water 800 g) | 100 |
| A-5 POTATO | 1 | 1 |
| | 2 | 2 |
| | 3 | 3 |
| A-6 FISH | 250g | 250 |
| | 350g | 350 |
| | 450g | 450 |
| A-7 Beverage | 1(about 120ml) | 1 |
| | 2(about 240ml) | 2 |
| | 3(about 360ml) | 3 |
| A-8 Popcorn | 50g | 50 |
| | 100g | 100 |

Troubleshooting

| Normal | |
|--|--|
| The microwave oven interference created | It is normal for the microwave oven in operation can interfere with the reception of your radios and televisions. It is a phenomenon that we find with other small appliances, such as mixers, vacuum cleaners and fans. |
| Low microwave oven light | In low power mode, it is normal that the microwave cooking is slower. |
| Vapor accumulates and hot air exits the ducts | During cooking, the food can release vapor. Some steam may accumulate on cold surfaces such as the microwave oven door. It's normal. |
| The microwave oven was accidentally turned on while not food contains. | It is forbidden to operate the microwave oven without food inside. It's very dangerous. |

| Problem | Possible Cause | Solution |
|---|--|--|
| Cannot turn on the microwave oven. | (1) The cable Power is not properly connected | Wait 10 seconds and then reconnect it. |
| | (2) Blown fuse or circuit breaker is activated. | Replace the fuse or circuit breaker switch on again (repairs must be performed by a professional society). |
| | (3) There is a problem with the power outlet. | Test it with other appliances. |
| The microwave oven is not heating. | (4) The door is not closed. | Securely close the door. |
| The glass tray makes a noise when the microwave oven is in operation. | (5) The guide ring or the bottom of the inner compartment of the microwave is dirty. | Refer to paragraph Clean your microwave-ondes for cleaning surfaces rooms. |

Care and Maintenance

Be sure to disconnect the unit from the power supply.

1. After use, clean the microwave oven cavity with a slightly damp cloth.
2. Clean accessories with soapy water.
3. The door frame, seal and nearby parts must be thoroughly cleaned with a damp cloth when they are dirty.
4. Do not use abrasive cleaning products or hard metal scraper to clean the glass microwave oven door, as they will scratch the glass surface, which can break it.
5. Cleaning Tip - To facilitate cleaning of the inner walls of the microwave oven can contact cooked food: Place half a lemon in a bowl, add 300 ml of water and heat with 100% power microwave for 10 minutes. Wipe the microwave oven with a dry cloth.

Technical specifications

| | |
|--------------------------------|-----------------------|
| model: | SCMW2028SDB |
| Nominal voltage: | 230V ~ 50Hz |
| Rated Input Power(microwave): | 1400W |
| Rated Output Power(microwave): | 900 W |
| Oven Capacity: | 28 L |
| Turntable Diameter: | 288 mm |
| External dimensions: | 495*395*290mm |
| Net weight: | Approximately 12.88kg |



This symbol on the product indicates that this appliance must be discarded in accordance with Directive 2012/19/EU on Equipment of Electric Waste and Electronic (WEEE) .

The electronic and electrical equipment containing hazardous substances which could have consequences on the environment and human health during reprocessing cycle of the product.

Thus, at the end of the life of this appliance, it should not be disposed of with unsorted household waste.

Your role as final consumers is crucial in terms of reuse, recycling and obtaining other types of value creation from this. You have the choice of different collection systems and exchanges organized by local authorities (recycling centers) and distributors. It is your duty to use these opportunities.

The warranty does not cover product wear parts, no problems or damage resulting from:

- (1) Surface damage due to normal wear of the product;
- (2) Defects or damage due to contact of the product with liquid and due to corrosion caused by rust or the presence of insects;
- (3) Any incident, abuse, misuse, modification, unauthorized removal or repair;
- (4) Any improper maintenance operation, not in accordance with product instructions or connection to improper voltage.
- (5) Any use of accessories not supplied or approved by the manufacturer.

The warranty is void if the elimination of plate and / or the product serial number.

SCHNEIDER

Ce produit est importé par / This product is imported by:
SCHNEIDER CONSUMER GROUP
12, rue Jules Ferry, 93110 Rosny-sous-Bois, FRANCE